

FIG. 1

20 ELECTRIC CIRCUITRY SECTION
 42 ADJUSTMENT SECTION
 26 ECHO CANCELER

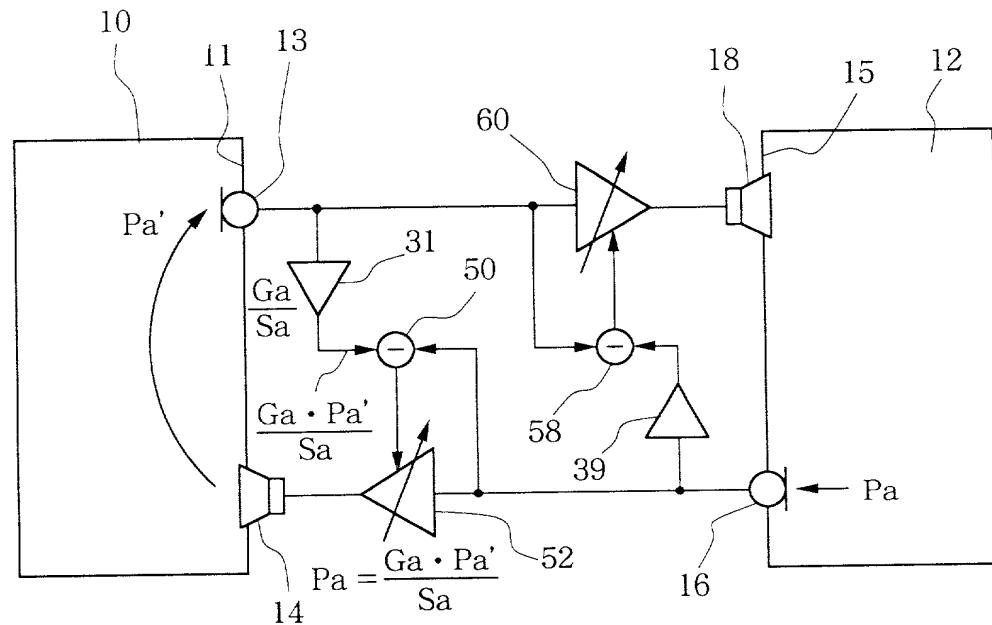


FIG. 2A



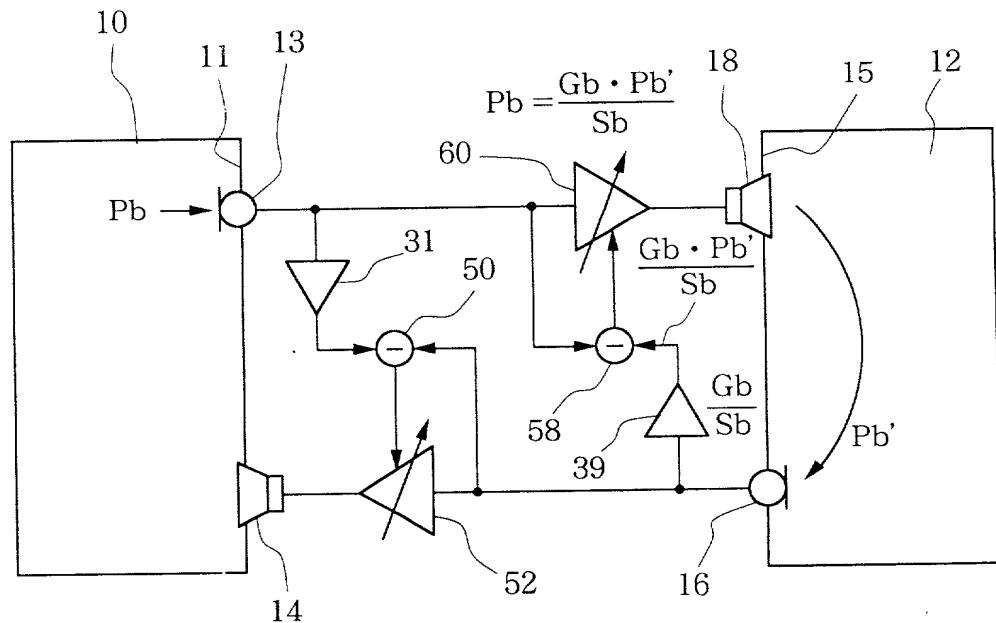


FIG. 2B

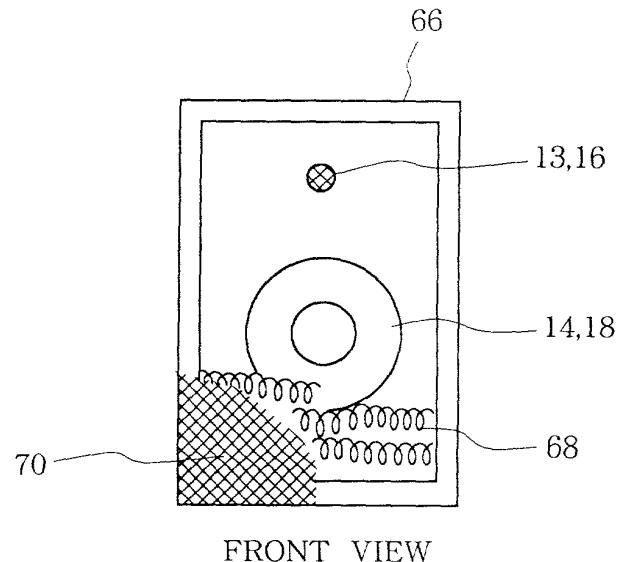


FRONT VIEW

FIG. 3A

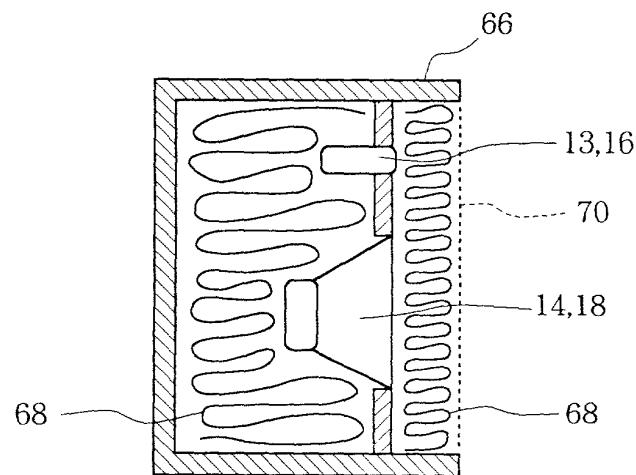


SECTIONAL SIDE VIEW

FIG. 3B

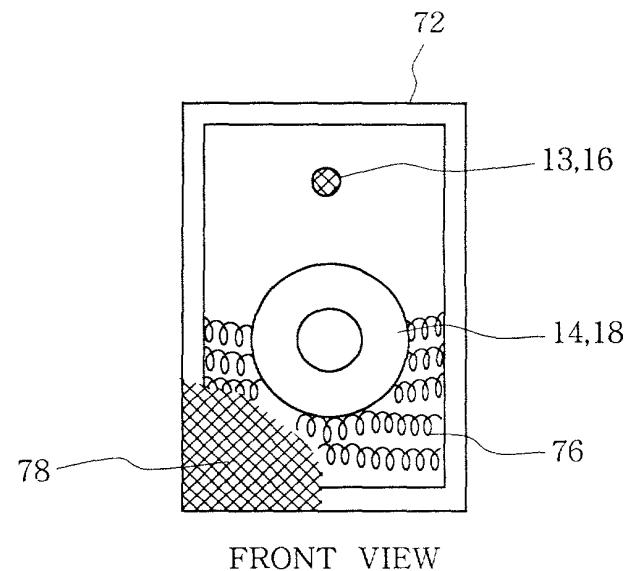


FRONT VIEW

FIG. 4A

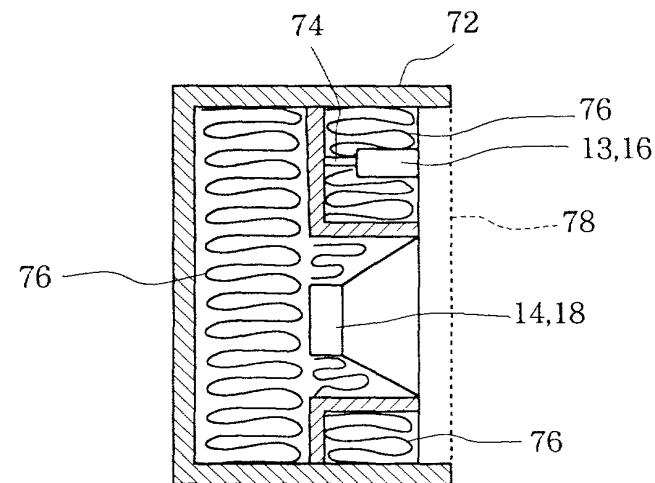

SECTIONAL SIDE VIEW

FIG. 4B

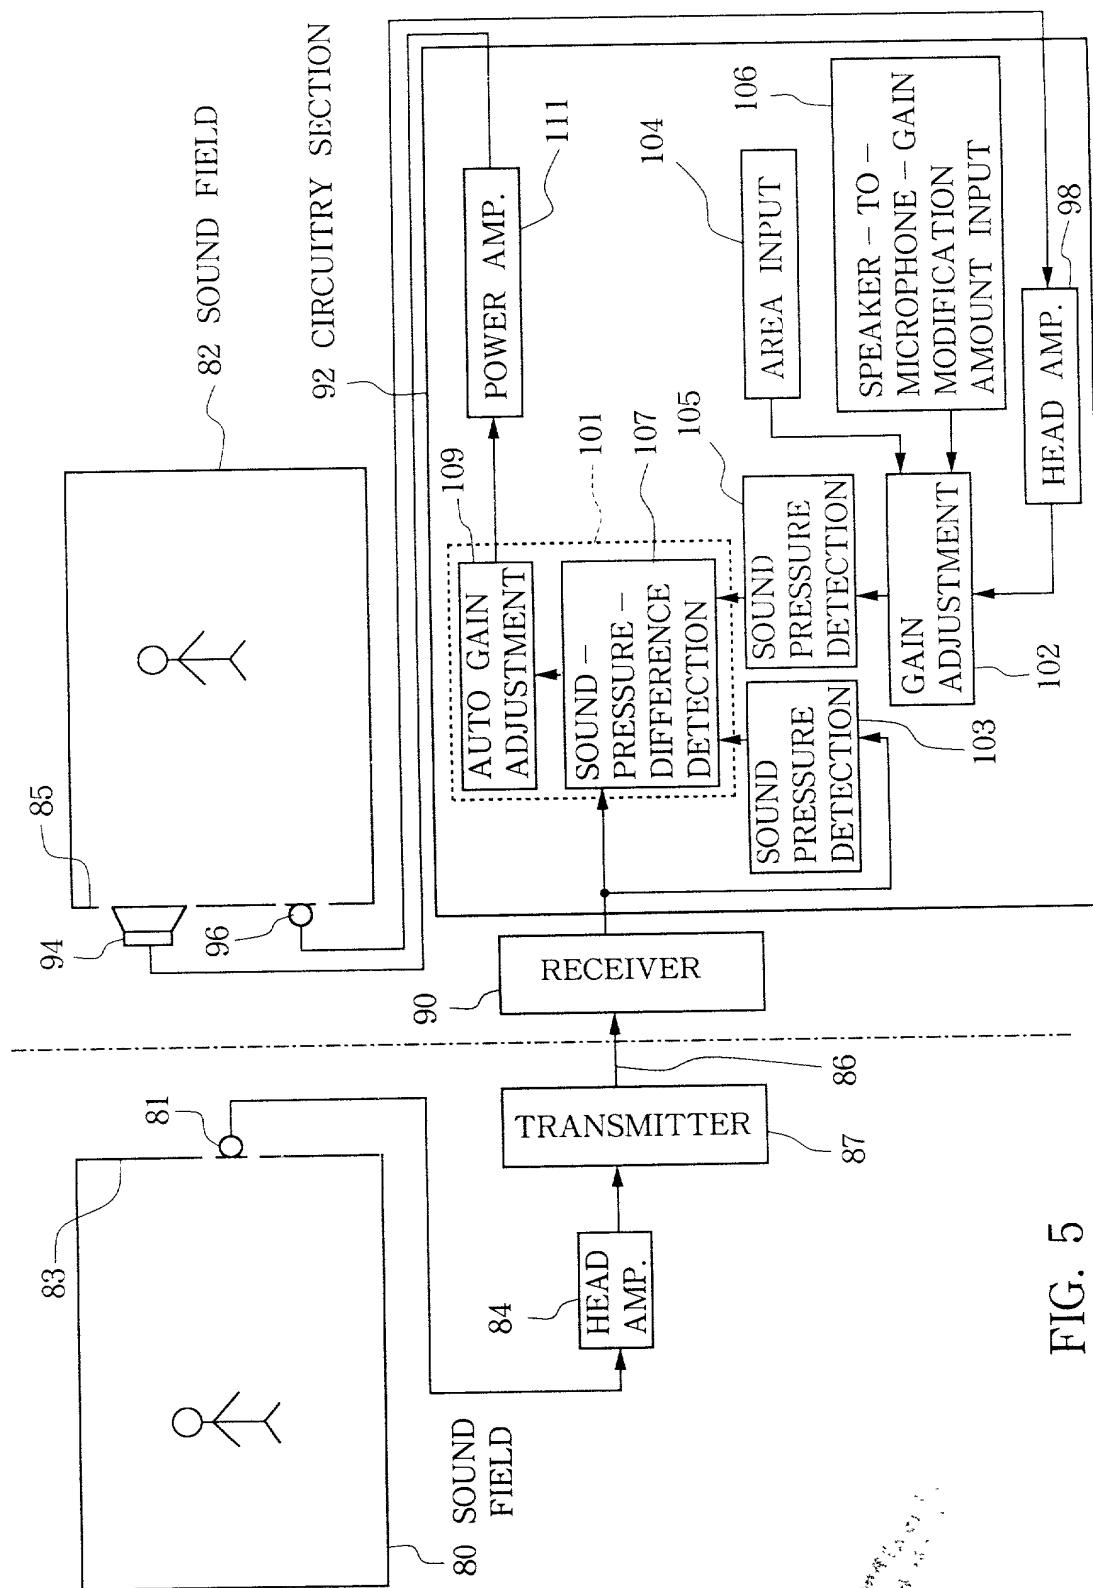

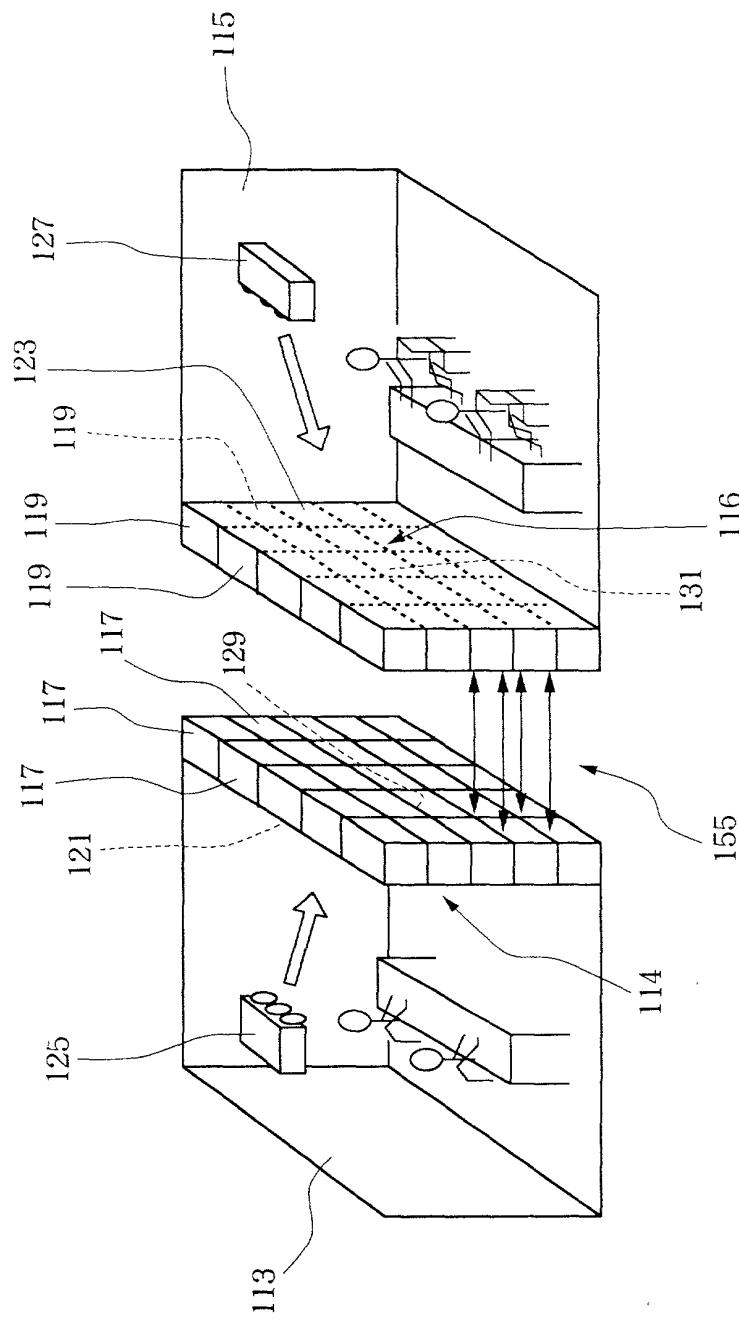


FIG. 6

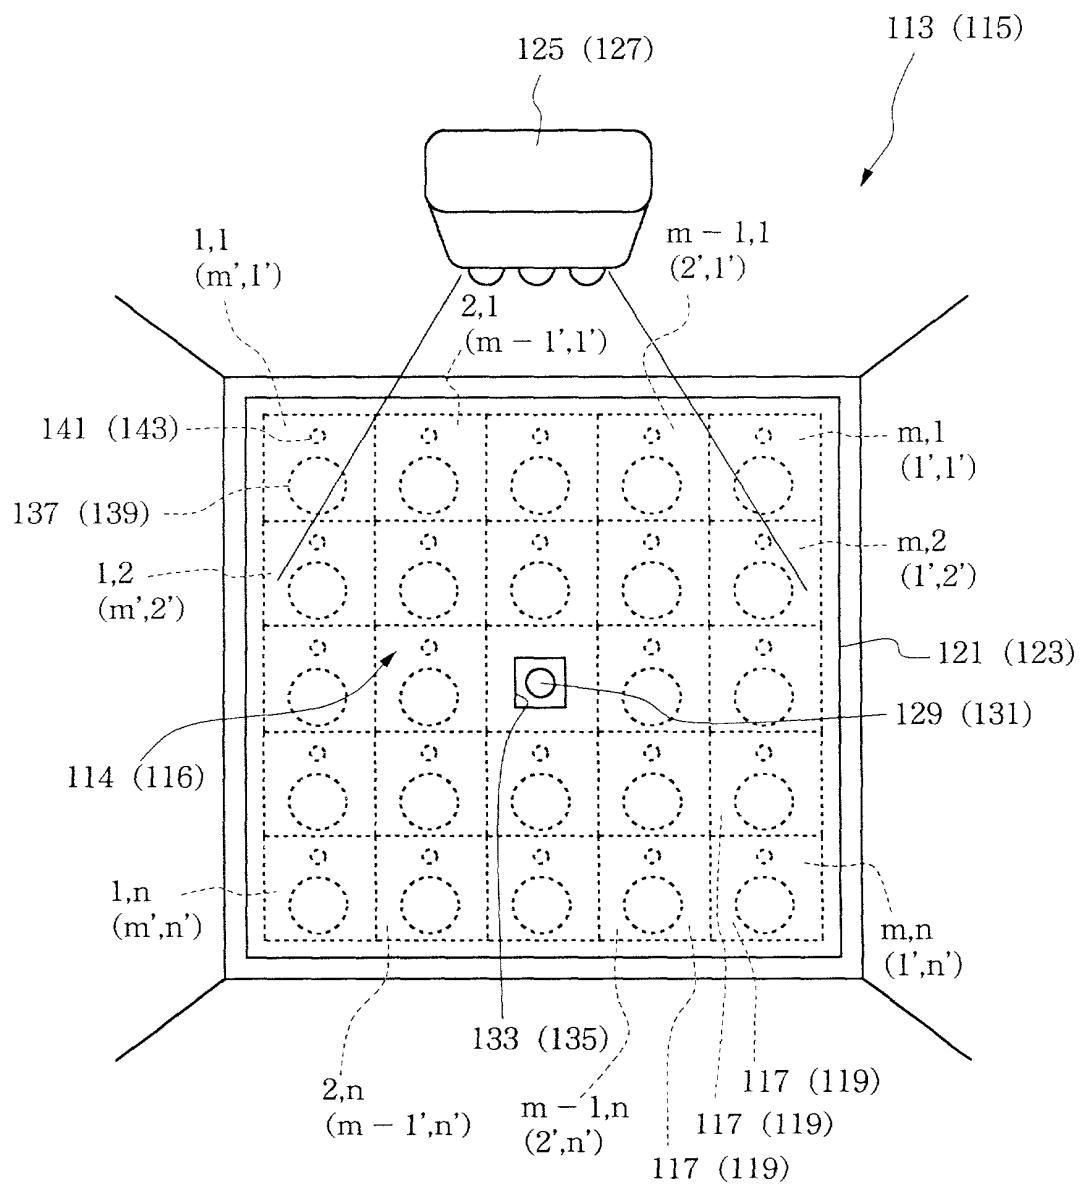


FIG. 7

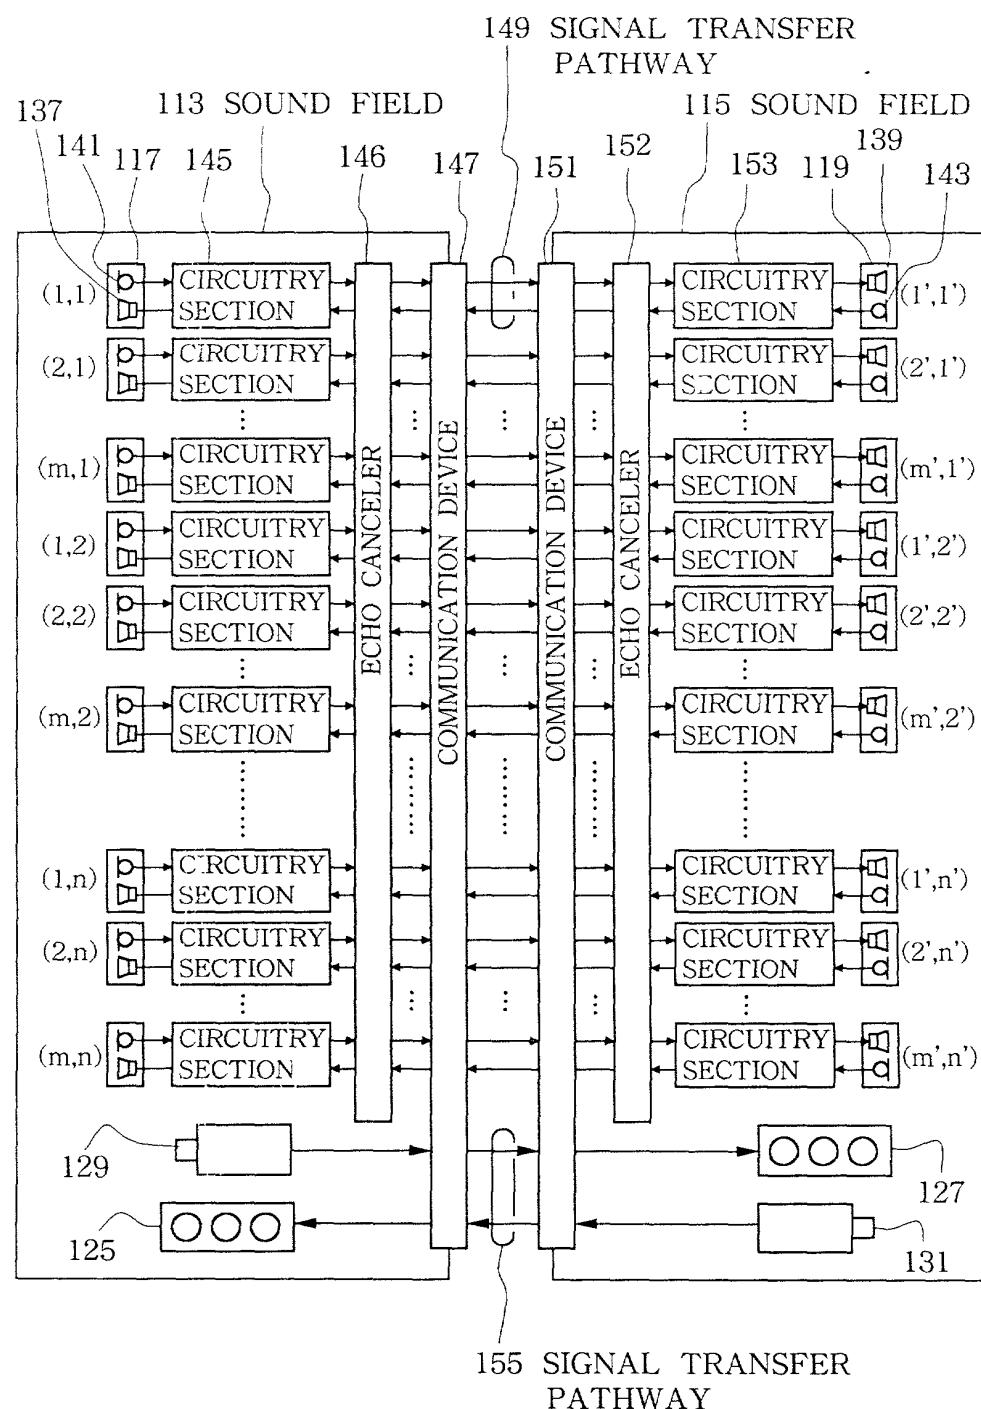


FIG. 8

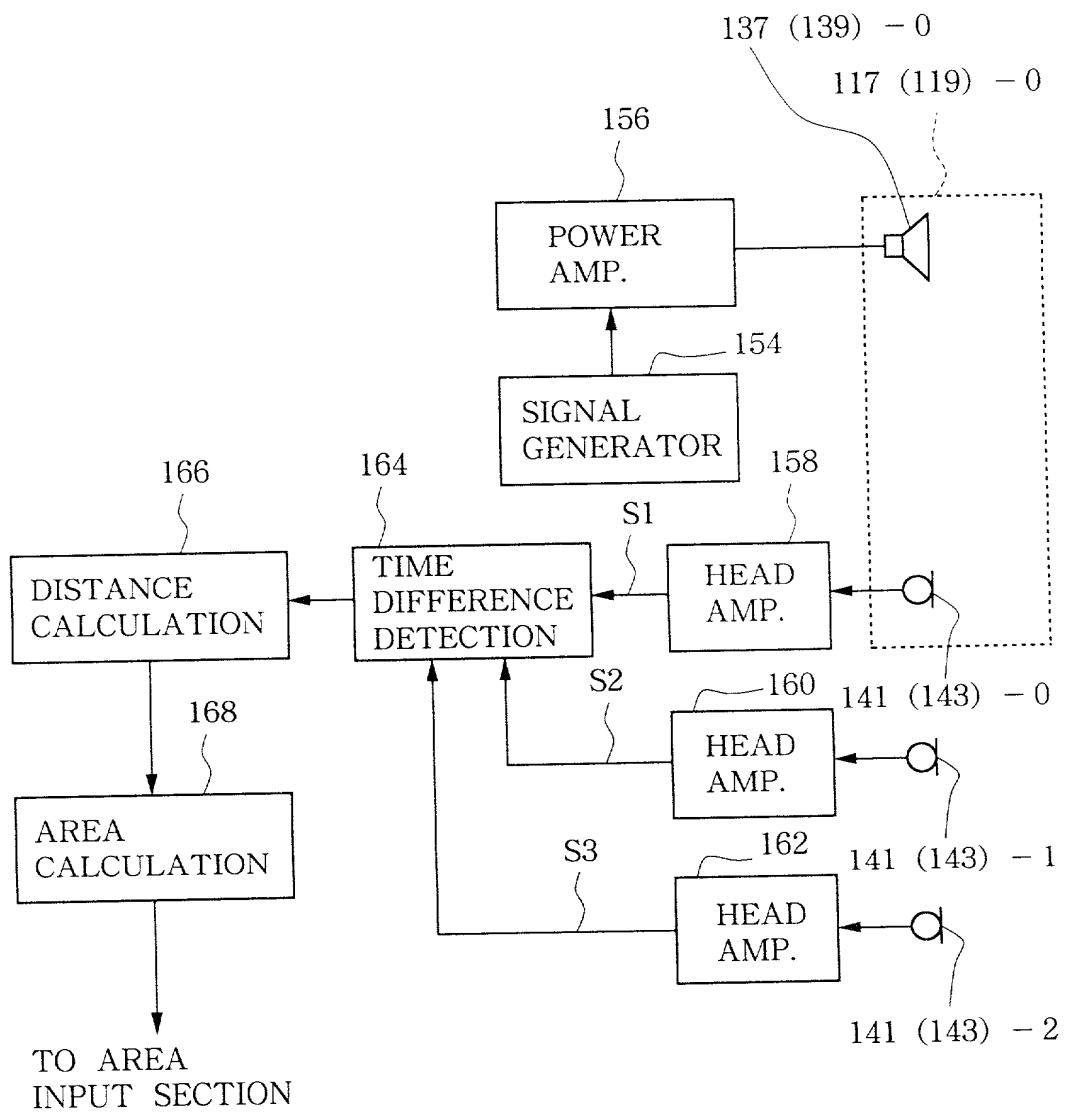


FIG. 9

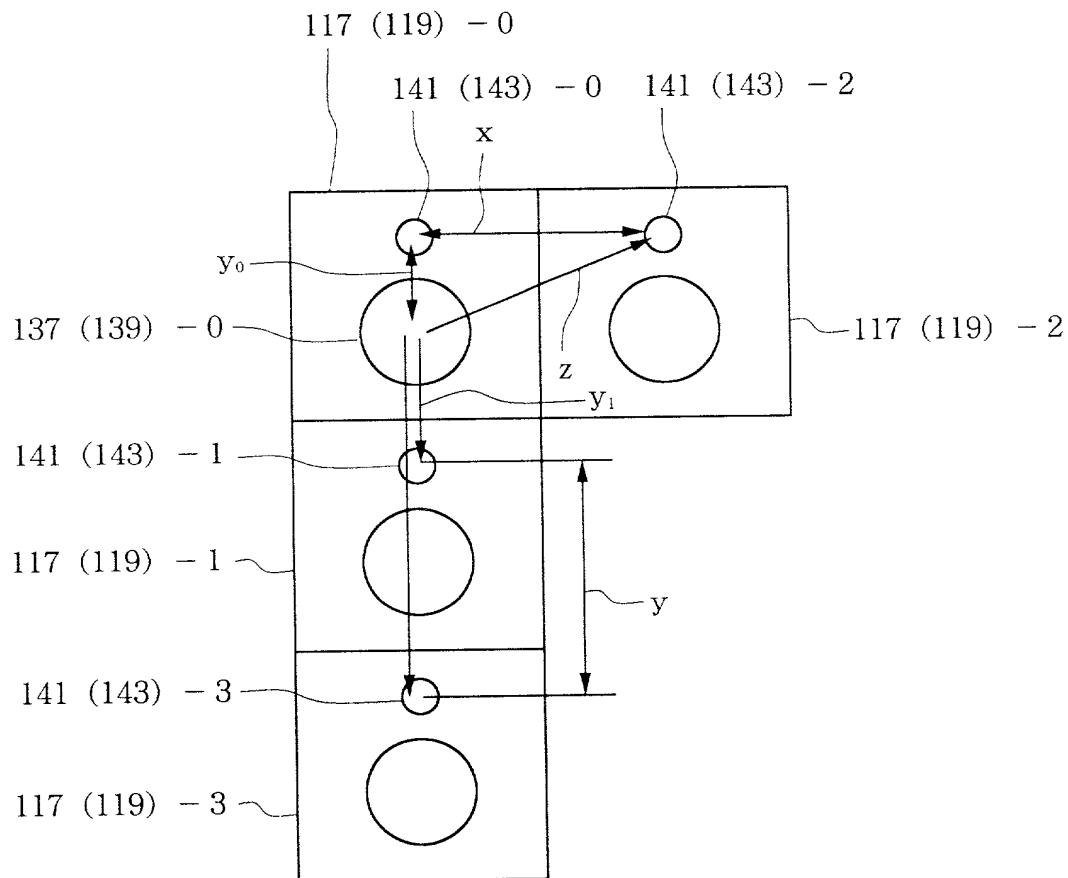


FIG. 10

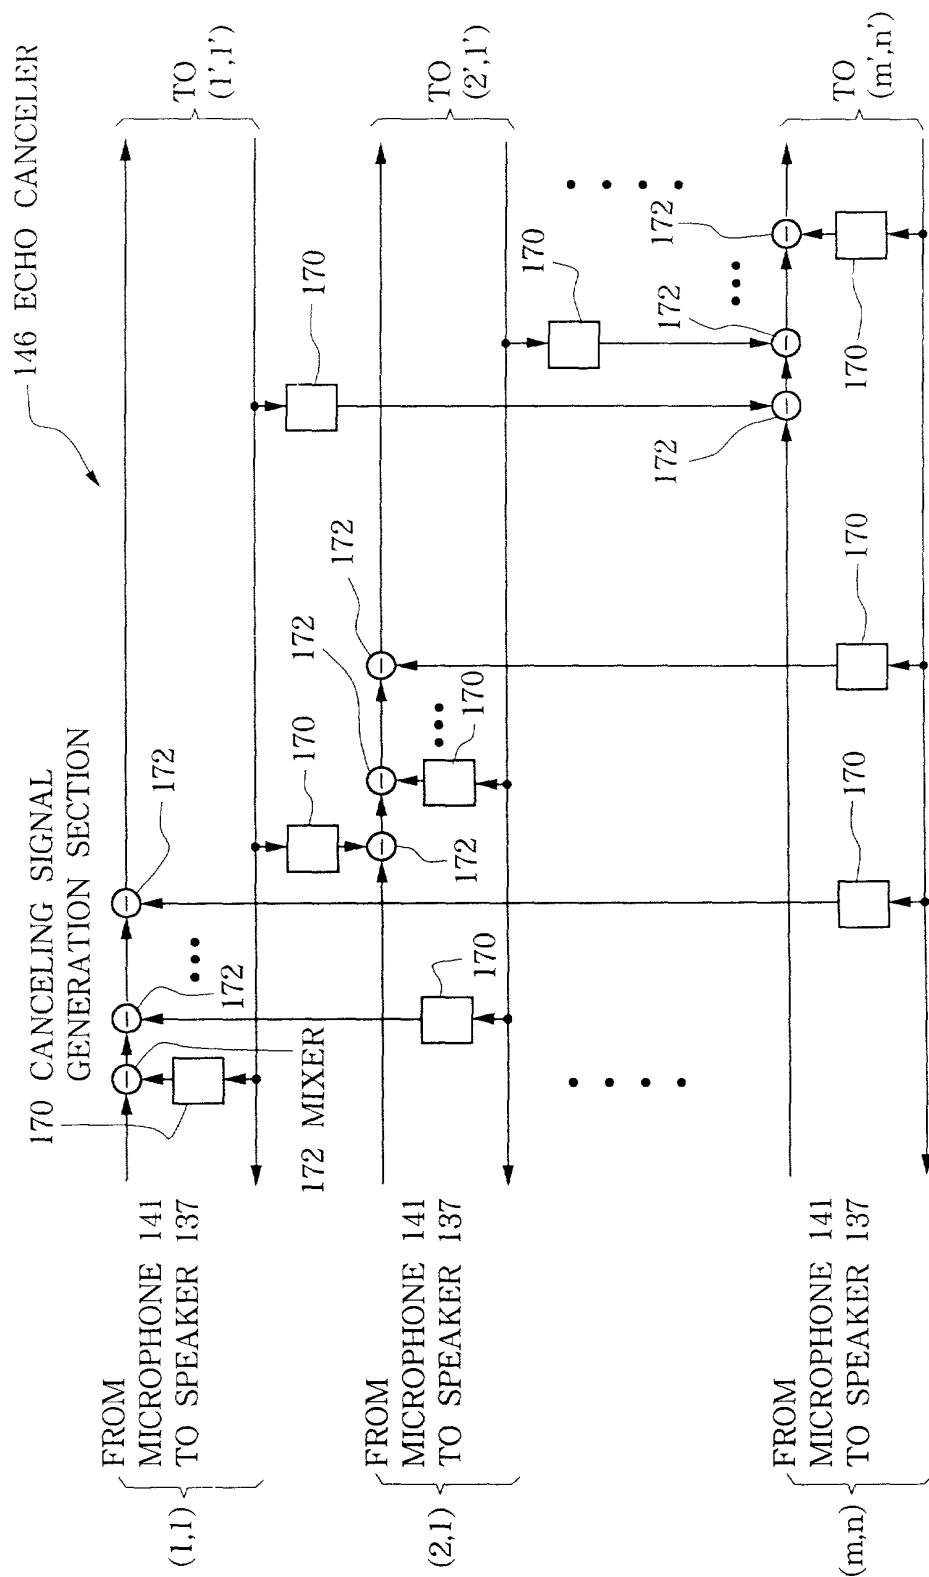


FIG. 11

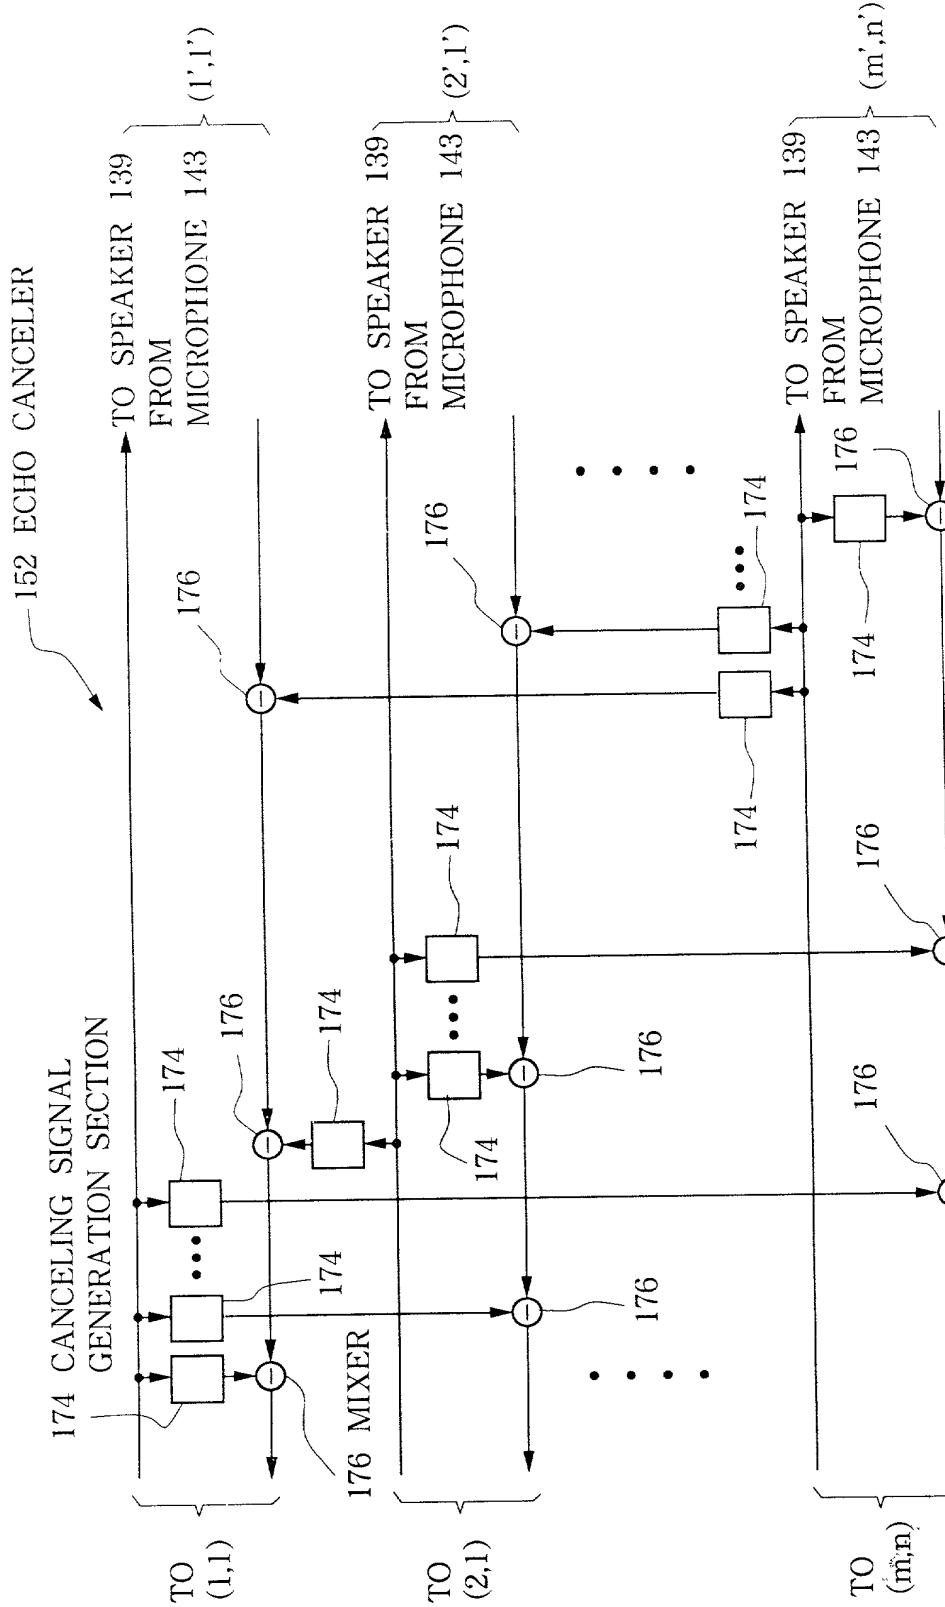


FIG. 12

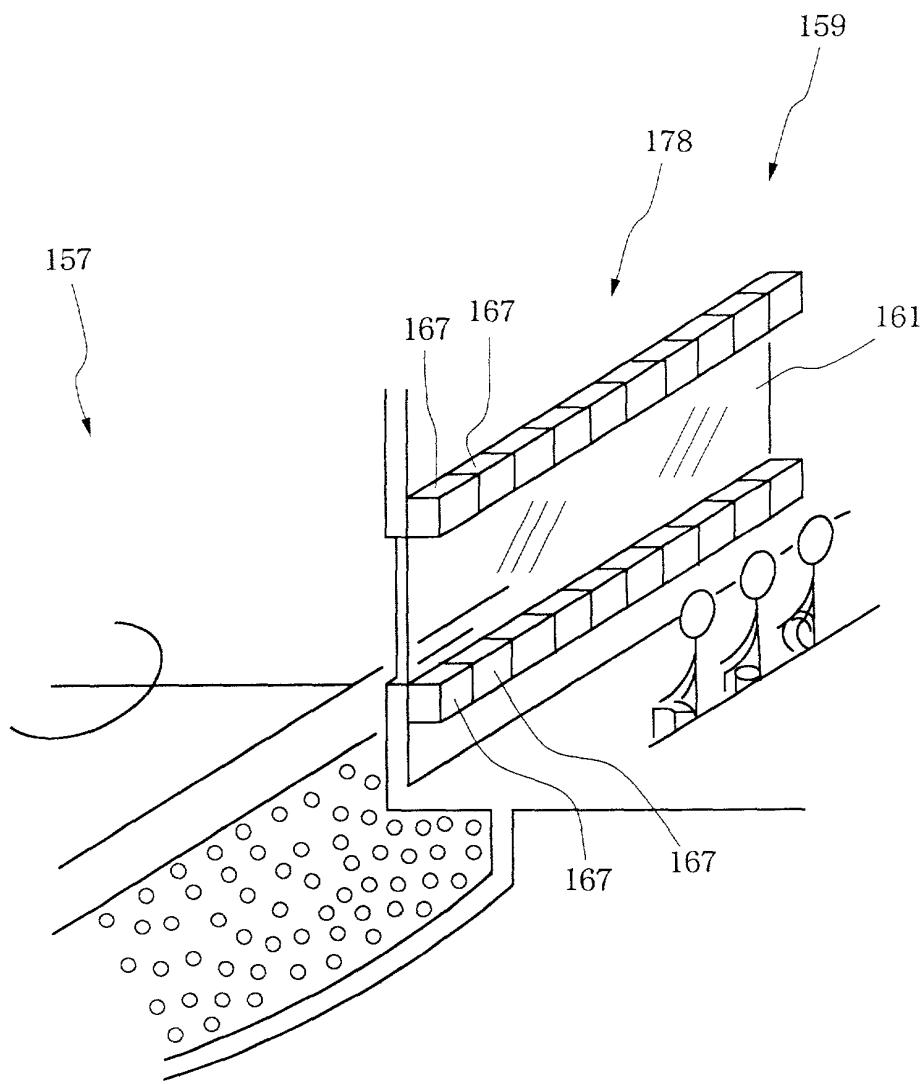
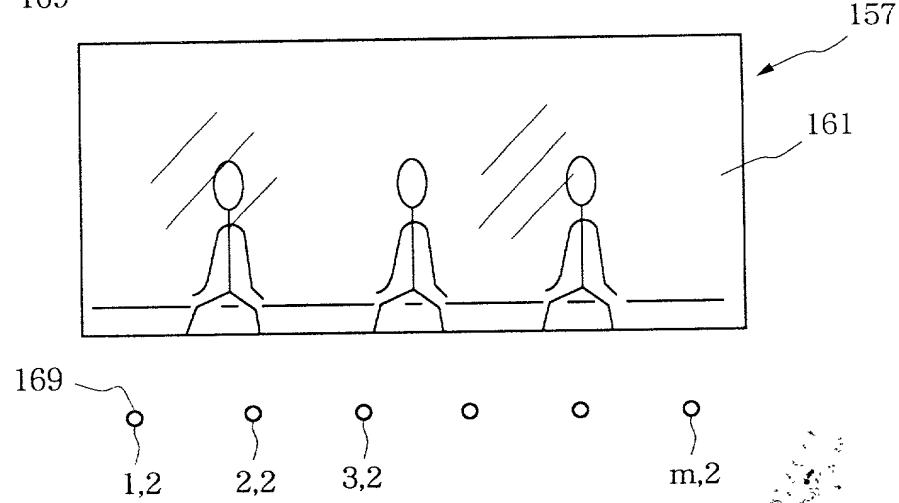
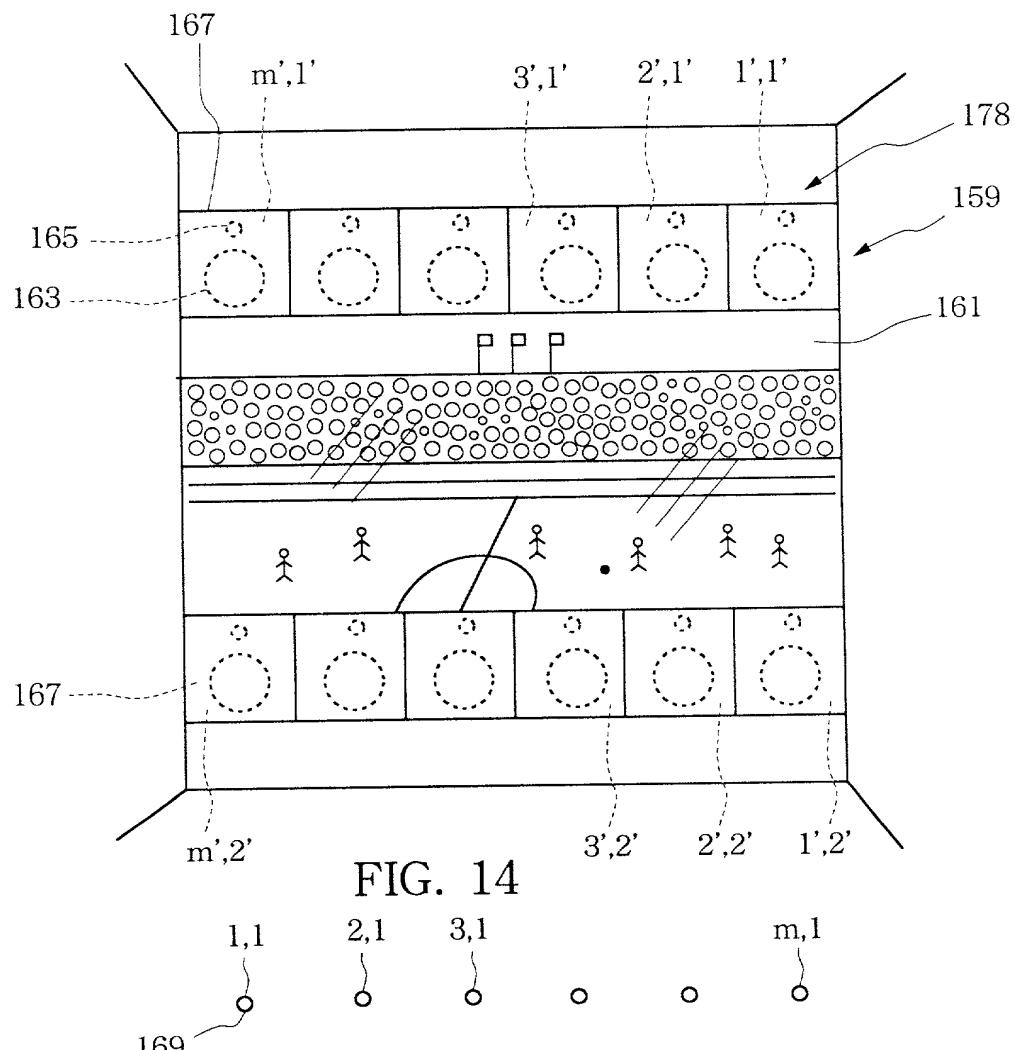


FIG. 13



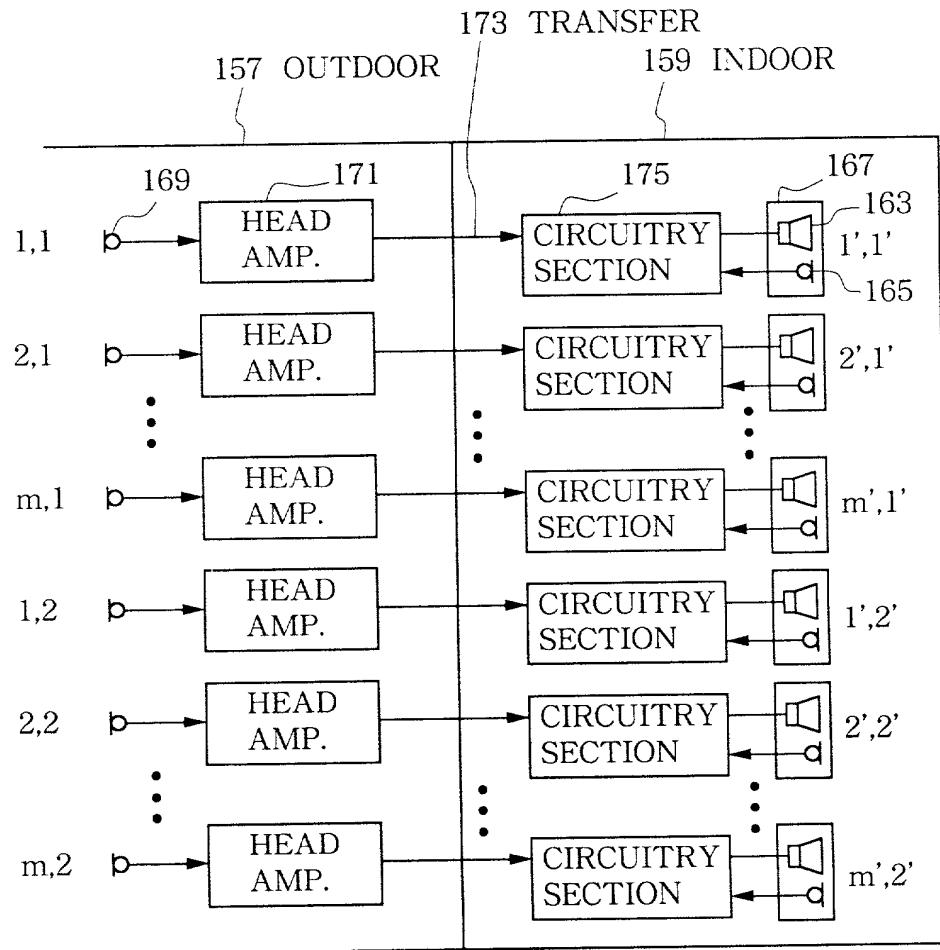


FIG. 16